



Control

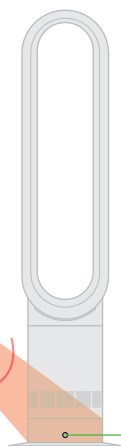


To operate, point the remote control toward the front of the base.



 
Standby ON/OFF



Attach the remote control to the top of the appliance with the buttons facing down.

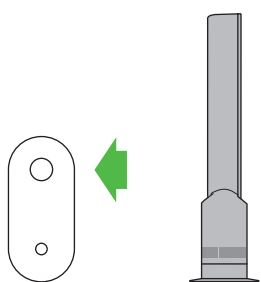


Select a high flow of air.

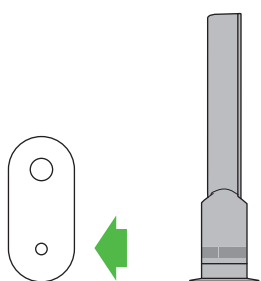

Select a low flow of air.



Standby
ON/OFF

Airflow control

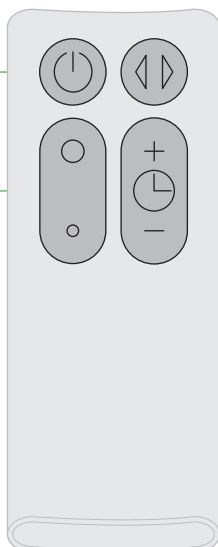

Oscillation
ON/OFF

Sleep timer

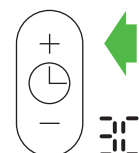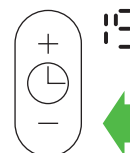


To set the sleep timer, select the desired time. When time reaches zero, the appliance will go into standby mode. To cancel, reduce the time until two dashes appear.




Cleaning


Clearing blockages

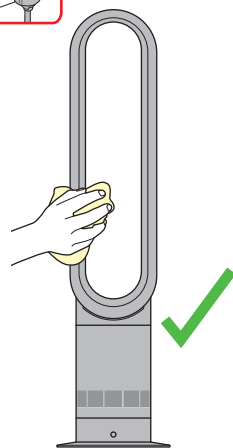


To clean, wipe with a dry or damp cloth.

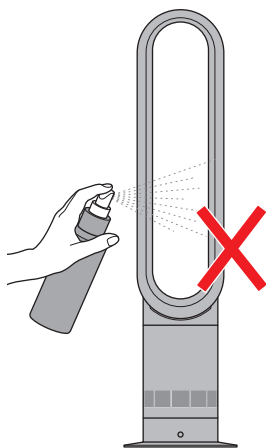

Do not use detergents or polishes to clean the appliance.

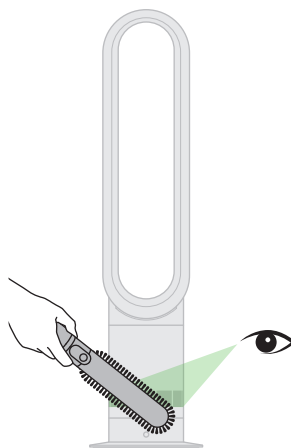

Look for blockages in the air inlet holes. Use a soft brush to remove debris.

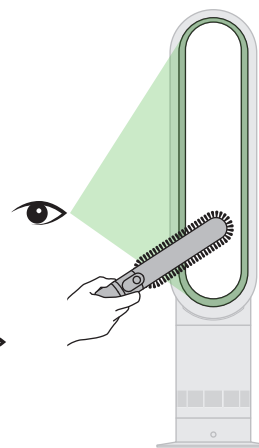

Look for blockages in the small aperture inside the loop amplifier. Use a soft brush to remove debris.